



Focus RS/ST Oil Breather kit fitting Guide

WARNING: BEFORE CARRYING OUT ANY WORK ON THE CAR, PLEASE DISCONNECT THE BATTERY TERMINALS.

Remove Undertray to gain access from underneath

Remove Standard Oil filter housing

Remove the plastic top housing – it all unclips, Fit the new Billet Pro top housing using the supplied Seal and secure with the grub screws,



Refit the housing with the supplied seals and Oil filter – we advise cleaning thoroughly 1st.

Fit New Pro Alloy Breather tank – this is located neatly next to the battery box

Remove the battery box lid - an 8mm hole will need to be drilled to attach the Tank – measure this accurately.

Attach the biggest of the pipework to the vent and secure as low down in the engine bay as possible




Next you need to plumb in the new Parts

Cut off enough pipe from one of the lengths to block off the manifold breather with the supplied plug



Connect pipework as shown here

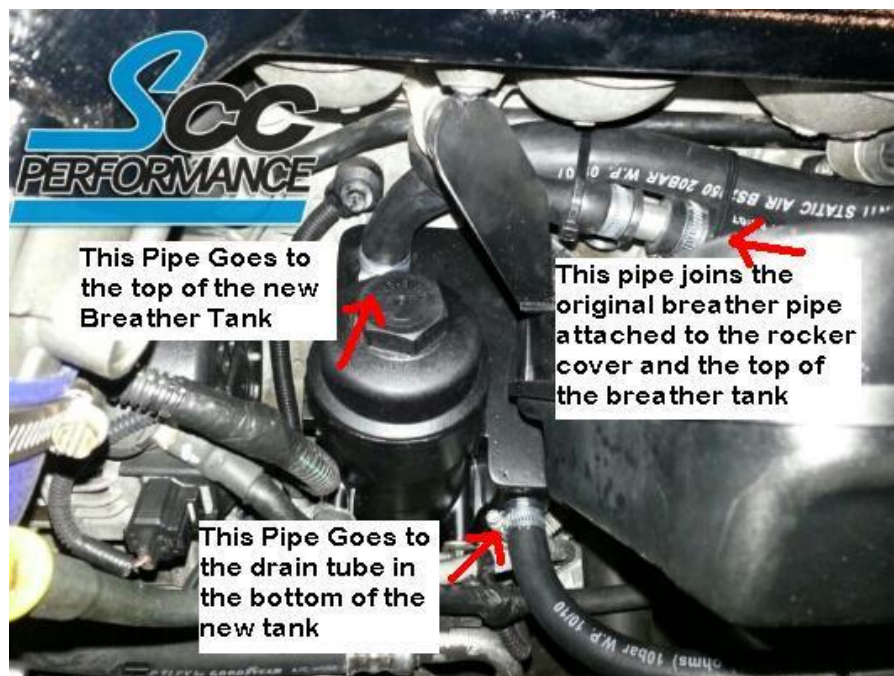



Start up and check for oil leaks – then refit undertray

Stand back and admire your handywork.

Please don't hesitate to call if you need any assistance

01727 867747

orders@focusrparts.co.uk